



Fujifilm FinePix XP50 Battery Replacement

Replace the battery in your Fujifilm FinePix XP50.

Written By: Catherine Daniel



INTRODUCTION

In order to keep your camera functioning properly, and working battery is vital. A dead or drained battery will prevent the camera from turning on, taking photos, using flash, etc. Replacing the battery or removing for charge is quick and simple.



PARTS:

- [Fujifilm Li-Ion Battery NP-45A](#) (1)
-

Step 1 — Battery



- Slide the lower silver tab labeled "1" down.
- Slide the upper silver tab labeled "2" down. Once the second tab is flipped, the door will spring open.

Step 2



- Slide small orange tab to release the battery.

Step 3



- Simply insert the new battery following the black arrow printed on the battery, matching the orange side of the battery to the orange rubber of the inner battery door.
- The orange tab will automatically move to hold the battery in place upon insertion.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-04 03:42:24 PM.